

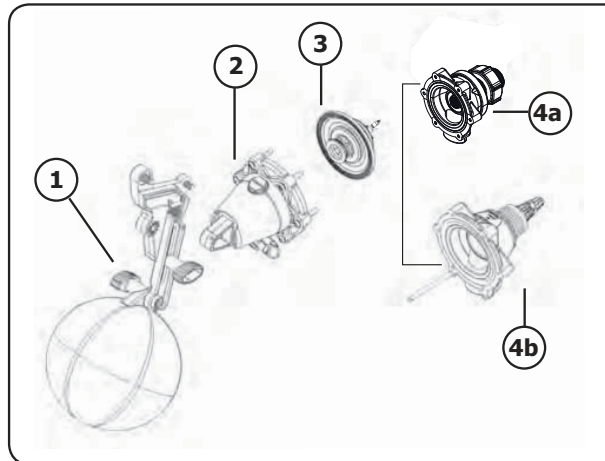


TOPAZ TROUGH VALVE


PARTS IDENTIFICATION SHEET

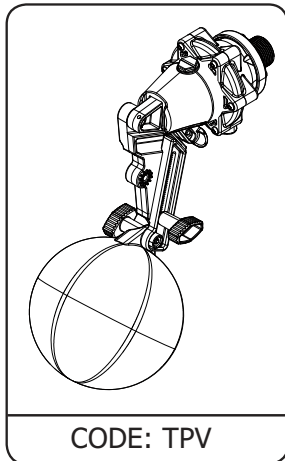


CODE	DESCRIPTION
1	Float Assembly
2	TPP2 Cap & Actuator Assembly
3	TPP3 Diaphragm Assembly
4a	Detach Base Assembly
4b	1 Piece Base Assembly

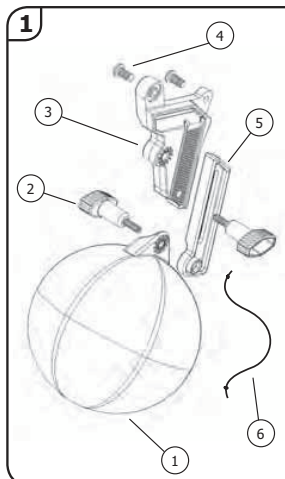


CODE	DESCRIPTION
1	TPP10110 70mm Float
	TPP10115 95mm Float
	TPP10120 125mm Float
2	TPP1020 Wing Bolt
3	TPP1030 Extension Arm
4	TPP1040 Bolt M5 x 12 Pan Slot
5	TPP1050 Extension Slide
6	TPP1060 Float Cord

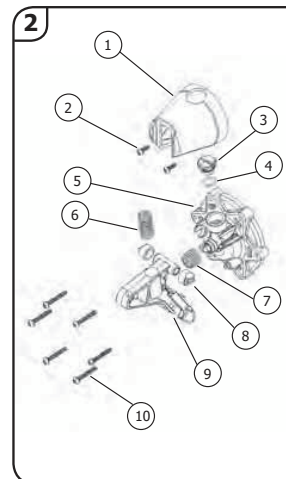

CODE	DESCRIPTION
1	TPP2010 Actuator Cap
2	TPP2020 6g x 10 S/S Screw
3	TPP2030 Frost Pro Plug
4	TPP2040 Frost Pro O'ring
5	TPP2050 Valve Cap Assembly
6	TPP2060 Actuator Spring
7	TPP2070 Damping Spring
8	TPP2080 Bearings (set of two)
9	TPP2090 Actuator Arm
10	TPP2100 6g x 25 S/S Screw

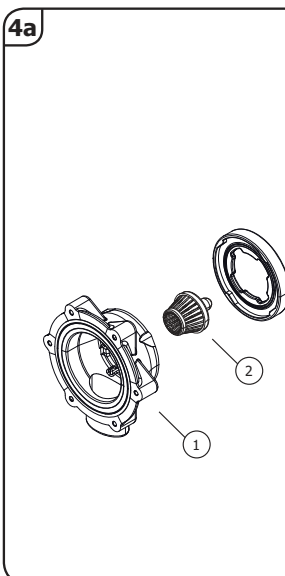

CODE	DESCRIPTION
1	TPP4A010 Detach Base
2	TPP4A030 Detach Filter
3	TPP4A020 Detach Seal
4	TPP4A0415 Detach Tail 20mm(3/4") Short
	TPP4A0425 Detach Tail 25mm(1") Short
	TPP4A0435 Detach Tail 32mm(1 1/4") Short
	TPP4A0410 Detach Tail 15mm (1/2") Long
	TPP4A0420 Detach Tail 20mm (3/4") Long
	TPP4A0431 Detach Tail 25mm (1" bsp) Long
	TPP4A0441 Detach Tail 32mm (1 1/4" bsp) Long
	TPP4A0430 Detach Tail 1" npt Short
	TPP4A0440 Detach Tail 1 1/4" npt Short
	TPP4A0432 Detach Tail 1" npt Long
	TPP4A0442 Detach Tail 1 1/4" npt Long
5	TPP4A050 Seal Washer 15mm (1/2")
	TPP4A051 Seal Washer 20mm (3/4")
	TPP4A052 Seal Washer 25mm (1")
	TPP4A053 Seal Washer 32mm (1 1/4")
	TPP4A054 Backing Washer SS 32mm (1 1/4")
6	TPP4A060 Backnut 15mm (1/2")
	TPP4A061 Backnut 20mm (3/4")
	TPP4A062 Backnut 25mm (1")
	TPP4A063 Backnut 32mm (1 1/4")

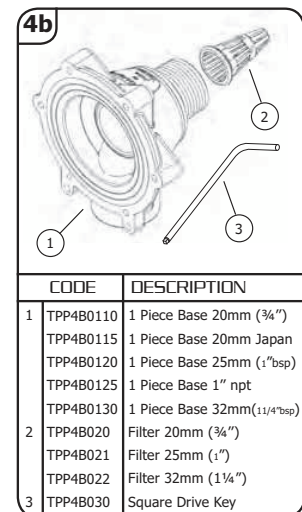

CODE	DESCRIPTION
1	TPP4B0110 1 Piece Base 20mm (3/4")
	TPP4B0115 1 Piece Base 20mm Japan
	TPP4B0120 1 Piece Base 25mm (1" bsp)
	TPP4B0125 1 Piece Base 1" npt
	TPP4B0130 1 Piece Base 32mm(1 1/4" bsp)
2	TPP4B020 Filter 20mm (3/4")
	TPP4B021 Filter 25mm (1")
	TPP4B022 Filter 32mm (1 1/4")
3	TPP4B030 Square Drive Key

200 L / MIN